

版本号: S-A3-V1-2021.12.24

装订成品尺寸: 100mm*150mm

材质: 100g 书写纸

装订方式: 折页

印刷: 双色 橙色 ● PANTONG 151C ● 黑色

正面

产品配件 /Product Accessories

- USB转USB-B插头线
- 水晶头转水晶头线
- 内六角螺丝*4
- 内六角扳手*1
- USB to USB-B cable
- Registered Jack Connector Cable
- Allen key screw*4
- Allen wrench*1

支持平台 /Supported Platforms

- PC电脑: Windows 7/8/10/11
- PXN莱仕达方向盘: PXN-V10
- Support Windows 7/8/10/11
- PXN Racing Wheels: PXN-V10

产品规格 /Product Specifications

- | | | | |
|--------|--------|---------------------|--------------|
| • 产品型号 | PXN-A3 | • Product Model | PXN-A3 |
| • 连接方式 | 有线 | • Connection Method | Wired |
| • 工作电压 | 5V | • Working Voltage | 5V |
| • 工作电流 | ≤85mA | • Working Current | ≤85mA |
| • 本体重量 | 约3180g | • Product Weight | About 3180 g |
| • 使用温度 | 0~40℃ | • Use Temperature | 0~40℃ |
| • 使用湿度 | 20~80% | • Use Humidity | 20~80% |

 
注意事项 /Attention

- 避免强烈震动及重力跌落。
 - 请勿自行分拆、改装及修理。
 - 避免水或其它液体进入产品内部，以免造成损坏。
 - 避免存放于潮湿、高温、油烟等场所。
 - 连接和移除设备时，注意用力适用。
 - 儿童需在成年人的监护下使用本产品。
-
- Avoid strong vibration and gravity dropping.
 - Do not disassemble, modify or repair by yourself.
 - Prevent water or other liquids from entering the product to avoid damage.
 - Avoid storing in humid, high temperature, oily smoke and other places.
 - Please handle it gently when connect and remove the product.
 - Children should be under adult's supervision at all times when using this product.

S-A3-V1-2112



A3 | PEDALS 脚踏板

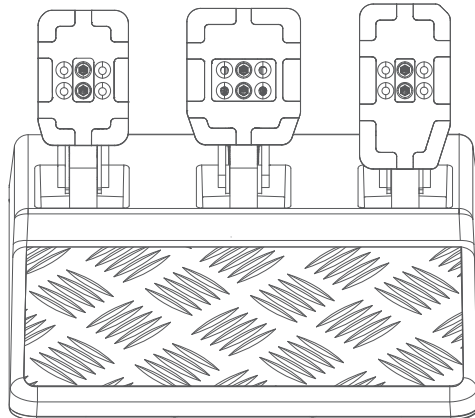


USER MANUAL

使用说明书

PXN莱仕达方向盘使用 /For PXN Racing Wheels

 
- 1 使用水晶头转水晶头线，将脚踏板接入方向盘脚踏板接口。
Plug the Pedals into the pedals' port on racing wheel with the registered jack connector cable.
- 2 连接成功，脚踏板上红色LED长亮，脚踏板即可使用。
The Pedals red indicator will remain ON when connection is successful, and the Pedals can be used now.

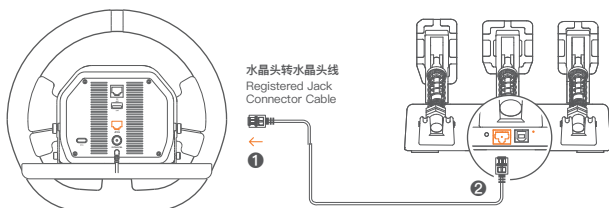

PC平台直连使用 /For PC

- 1 使用USB转USB-B插头线，将脚踏板接入PC主机USB口。
Plug the Pedals into PC USB port with the USB to USB-B cable.
- 2 连接成功，脚踏板上红色LED长亮，脚踏板即可使用。
The Pedals red indicator will remain ON when connection is successful, and the Pedals can be used now.
- 3 脚踏板数值对应分别为离合（X轴），刹车（Z轴），油门（Y轴）。
The value axis of Pedals correspond to clutch(X-axis)/ brake(Z-axis)/ accelerator(Y-axis).

 
* 在DINPUT类别游戏中，游戏会分别识别方向盘和脚踏板两个设备。通过在游戏内设置即可使用脚踏板。
* In the games of D-input category, the games will recognize both racing wheel and pedals separately. The pedals can be used by setting it in the games.

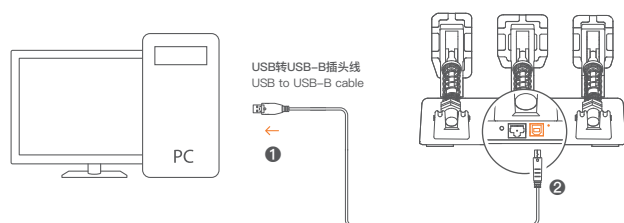

安装方法 / Installation

- 脚踏面板角度调节 /The Pedals Angle Adjustment

 
- 1 使用内六角扳手松开并取出 2 颗内六角螺丝。
Loosen and get the two Allen key screws with Allen wrench.
- 2 调整脚踏至所需角度，装上并拧紧 2 颗内六角螺丝。
Adjust the Pedals in a needed position and tighten the two Allen key screws.

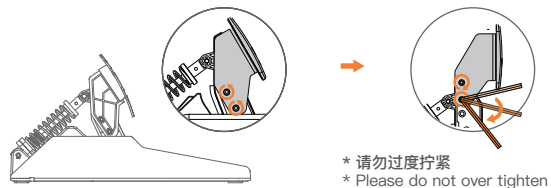

- 脚踏力度调节 /The Pedals Strength Adjustment

- ① 旋转图示部件即可调节脚踏力度。 注意：请在螺纹范围内调节部件。

 Rotate the component as shown to Note: Please rotate the component
adjust the Foot Pedals' strength. within screw thread.

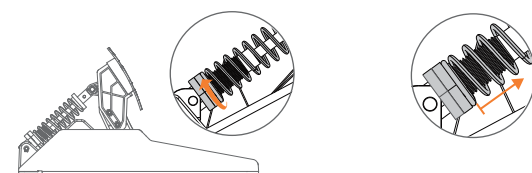

- 脚踏板固定 /Clamp the Pedals

- ① 脚踏板底部预留有4个螺丝孔，可使用所配螺丝固定在支架上。
There are 4 dedicated screw holes for clamping the racing wheel on stand with the screws included.

