 




X9

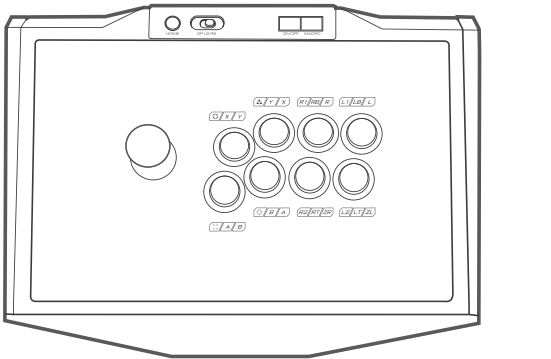 


ARCADE FIGHT STICK

User Manual

Thank you for choosing PXN's product and supporting our brand.
Please read the manual carefully before using.

● Product Overview

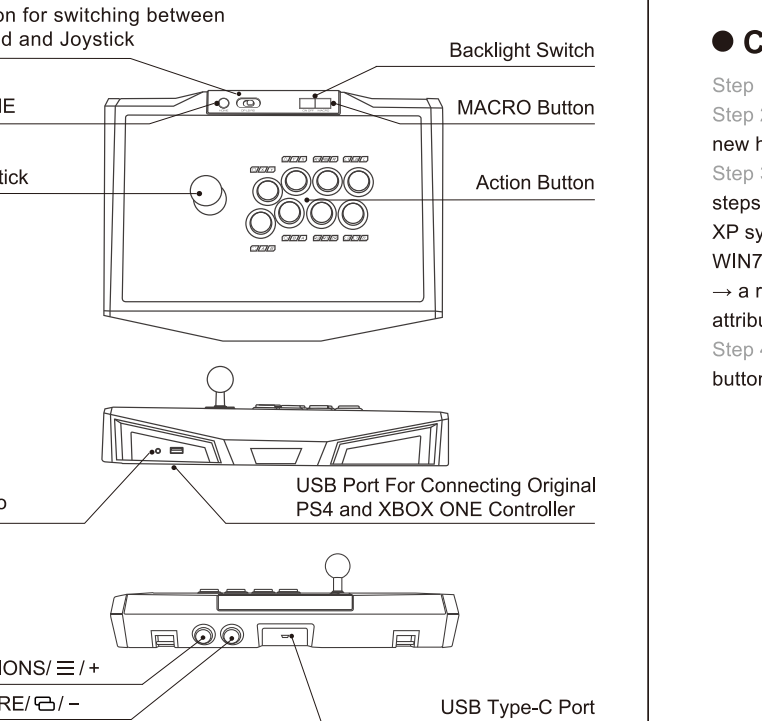

- 11 -

● System Requirement

Compatible Platforms: PC, PS3, PS4, XBOX ONE, SWITCH, Android
Note: Need the original gamepad for guidance when play on PS4 and XBOX ONE console.

● Connect with PC

Step 1 Plug the arcade stick into the computer.
Step 2 At the first connection, the computer will be prompted to find new hardware, and the driver will be installed automatically.
Step 3 The arcade stick function is available to test on PC. The specific steps show below:
XP system: Open control panel → game controller, click attribute testing.
WIN7 and above systems: Open control panel → device and printer → a right mouse click controller icon → game controller set, click attribute testing.
Step 4 Open the test interface as below, you can test the axes and buttons.



 
- 12 -

● Connect with PS3

Step 1 Plug the arcade stick into PS3, and power on the PS3 console.
Step 2 When the connection is successful, you can launch the game to play or conduct settings in game or console.

● Connect with PS4


Step 1 Connect the original PS4 controller to the arcade stick with USB cable. (The PS4 controller should be power-off before connection).
Step 2 Plug the arcade stick into PS4, and power on the PS4 console.
Step 3 After around 15 seconds, the LED indicator of PS4 controller keeps ON, then press the HOME button on arcade stick to play game. The connection is done.

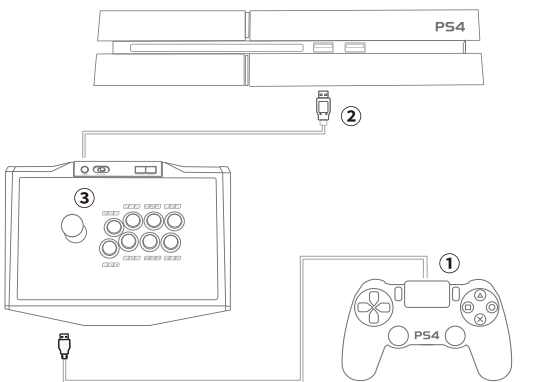

- 13 -


● Connect with XBOX ONE

 Step 1 Connect the original XBOX ONE controller to the arcade stick with USB cable. (The XBOX ONE controller should be power-off before connection).
Step 2 Plug the arcade stick into XBOX ONE, and power on the XBOX ONE console.
Step 3 After around 15 seconds, the LED indicator of XBOX ONE controller keeps ON, then press the HOME button on arcade stick to play game. The connection is done.

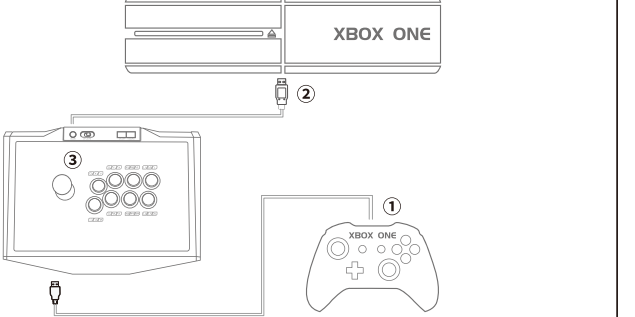

● Connect with SWITCH

 - Connect with SWITCH Console
Step 1 Plug the TYPE-C OTG into the USB interface of arcade stick.
Step 2 Plug the OTG adapter to the Switch console, power on the SWITCH console.
Step 3 When the connection is successful, you can launch the game to play or conduct settings in game or console.

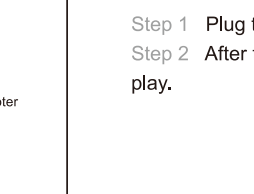


- 14 -

● Connect with Android


- Connect With Switch dock
Step 1 Place the Switch console into Switch dock and ensure successful connection.
Step 2 Plug the arcade stick into Switch dock and power on the Switch console.

 Note : Press "+" and "-" at the same time to take a screenshot.

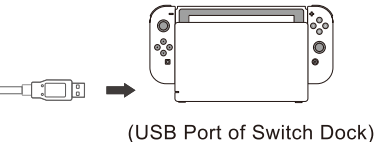

● Connect with Android

 - Connect with Android cellphone
Step 1 Plug the OTG adapter into the USB interface of arcade stick.
Step 2 Plug the OTG adapter into cellphone. (Micro OTG or Type-C).
Note : Some of cellphones need to turn on the OTG function in the phone setting.


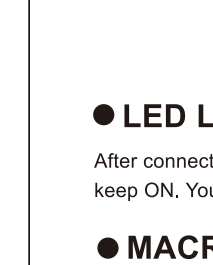


● Connect with Android TV box or TV

Step 1 Plug the arcade stick into Android TV box or TV.
Step 2 After the connection is successful, you can launch the game to play.

- 15 -

  ● The Button for Switching Between D-Pad and Joystick

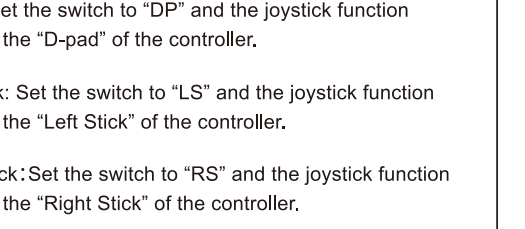

● LED Light Switch Button

 
After connected with device, the 8 buttons led light of arcade stick keep ON. You can switch the ON/OFF button to control the light.

● MACRO Function

• Buttons for setting MACRO function: "L1/LB/L", "L2/LT/ZL".
The button original function will be covered after set MACRO function.
• MACRO available buttons include: ⬆️/A/B, ⬇️/B/A, ⬅️/X/Y, ⬆️/Y/X, R1/RB/R, R2/RT/ZR, L1/LB/L, L2/LT/ZL, joystick UP, joystick DOWN, joystick LEFT, joystick RIGHT.
• How to set MACRO?
① Press the MACRO button, the indicator keep ON in green. Press "L1/LB/L" or "L2/LT/ZL", the indicator flash in green.

- 16 -

● To replace action buttons

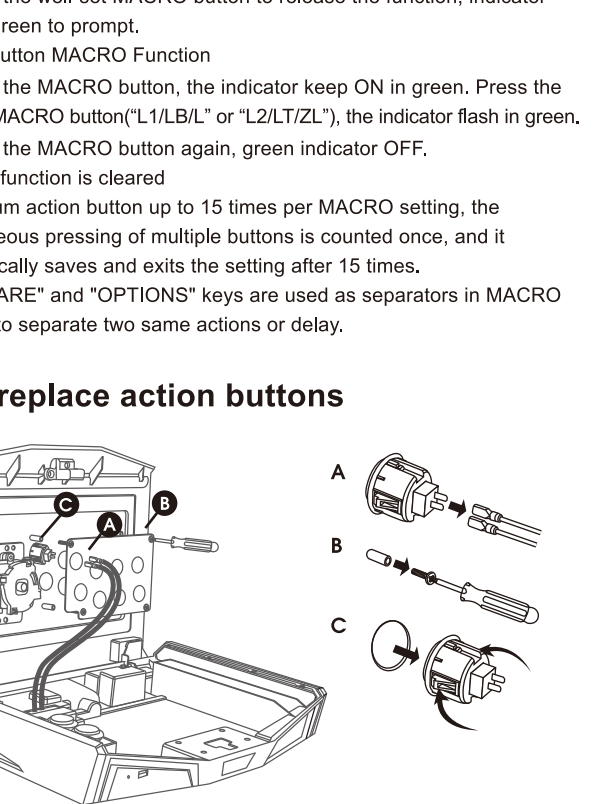

- 17 -


● Button Layout

	PS3®	PS4®	Xbox One™ (X-INPUT) / Android	SWITCH™
Action Buttons	⬆️	⬆️	A	B
	⬇️	⬇️	B	A
	⬅️	⬅️	X	Y
	⬆️	⬆️	Y	X
	L1	LB	L	L
	R1	RB	R	R
	L2	LT	ZL	ZL
	R2	RT	ZR	ZR
Joystick	UP/Y+	UP/Y+	UP/Y+	UP/Y+
	DOWN/Y-	DOWN/Y-	DOWN/Y-	DOWN/Y-
	LEFT/X+	LEFT/X+	LEFT/X+	LEFT/X+
	RIGHT/X-	RIGHT/X-	RIGHT/X-	RIGHT/X-
Functions	SELECT	SHARE	View	BACK
	START	OPTIONS	Menu	START
	PS	PS	X-Guide	HOME

● Audio Communication Function

The arcade stick has an audio communication function on the XBOX ONE/PS4 platform.

 - 18 -

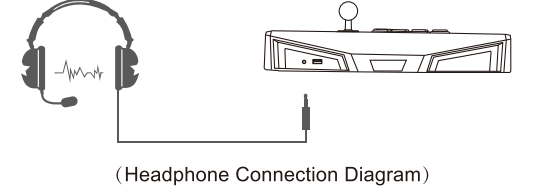

● Troubleshooting

• If the backlight is on but the Arcade Stick is not working when it is connected to the console, re-plug it or check that the controller is working properly.
• If the Arcade Stick is not working and the console screen freezes, the console may have crashed unexpectedly. Please restart the console and connect the Arcade Stick.
• If the Arcade Stick is not operating properly in the game, unplug and reconnect the Arcade Stick.
• When connecting the original controller, a high-quality USB cable is required.

● Attentions

• Avoid strong vibration, do not disassemble, modify or repair by yourself.
• Prevent water or other liquids from entering the arcade stick to avoid damage.
• Avoid storing in humid, high temperature, oily smoke and other places.
• Please handle gently when connect or remove the arcade stick.
• Children should be under adult's supervision at all times when using this product.

- 19 -

● Product Specification

Product Model	PXN-X9
Connection	USB Cable
Input	5V ⎓ 80mA
Packing Size	About 460*335*152mm
Product Size	About 403*296*123mm
Product Weight	About 3320g
Application Temperature	0-40°C
Application Humidity	20-80%

- 20 -