

System Requirements

Compatible Platforms	PC , Android , PS3 , PS4 , Xbox One/Series , Switch
System Requirement on PC	Windows 7/8/10

Product Overview

05

Instructions

Using on PC

Step 1 Plug the USB cable of the Arcade Stick into the computer. The indicator light will be on when connected successfully.

Step 2 When connecting to the computer for the first time, it will prompt to find new hardware and automatically complete the driver installation.

Function testing is available on computer. The specific steps show below:
Win7 or above Systems: Open the Control Panel → Device and Printer → Right-click on the Game pad icon → Game Controller Setting, Click the Properties Testing.

Using on Android

Connect with mobile phone

Connect the Arcade Stick to the Android mobile phone via OTG to control it.
(Note: Please open OTG function on phone before connection, Type-C OTG Adapter is not included)

Connect with Android TV

Plug the USB cable of the Arcade Stick into the Android TV to control it.
(Note: Due to the customization of the Android TV system, some Android system TVs do not support the insertion of peripheral devices)

06

Using on PS3

Step 1 Plug the USB cable of the Arcade Stick into the PS3, then turn on the power of the PS3.

Step 2 The PS3 will assign a channel to the Arcade Stick automatically when the connection is successful. Then the corresponding channel light will be on.

Using on PS4

Step 1 Power OFF the original PS4 controller, then connect original PS4 controller with the Arcade Stick via USB cable.

Step 2 Plug the USB cable of the Arcade Stick into the PS4, then turn on the power of the PS4.

Step 3 Press the button on the Arcade Stick once, then the indicator light will be on, and the connection is successful.

Using on XBOX ONE/SERIES

Step 1 Power OFF the original Xbox One/Series controller, then connect original Xbox One/Series PS4 controller with the Arcade Stick via USB cable.

Step 2 Plug the USB cable of the Arcade Stick into the Xbox One/Series, then turn on the power of the Xbox One/Series.

Step 3 The indicator light on the Arcade Stick will be on when the connection is successful.

Diagram of XBOX ONE Connection

07

Using on SWITCH

Enter Homepage of SWITCH, select Setting → Controllers and Sensors → select Pro Controller Wired connection, make sure that the option state is ON.

Connect with Switch

Step 1 The OTG Adapter is needed when connect with Switch Console. Connect the Type-C OTG Adapter with the Arcade Stick USB cable, plug the Type-C Adapter into SWITCH console port.

Step 2 The indicator light remains on when the connection is successful.
(Note: Type-C OTG Adapter is not included)

Connect with Switch Dock

Step 1 Plug the USB cable of the Arcade Stick into the USB port of the Switch Dock, and turn on the power of the Switch.

Step 2 The Switch will be automatically assign a channel to the Arcade Stick when the connection is successful. Then the corresponding channel light will be on.

TURBO function setting

- The buttons that can set the TURBO function are: A, B, X, Y, LB, RB, LT, RT.
- TURBO setting: Press and hold the TURBO button + the button that needs to set the TURBO at the same time, the LED flashes.
- TURBO deleting: Press and hold the TURBO button + the button that has been set to TURBO at the same time, the LED goes out.

Arcade Stick Mode switch

- When the stick switch is set to DP, the direction buttons work as D-pad.
- When the stick switch is set to LS, the direction buttons work as Left Joystick.

Audio Function

Interactive communication function is available on PS4 and Xbox one/Series platform.

08


注意事項/Attention

- 避免强烈震动, 不可自行拆卸、改装、修理。
- Avoid strong vibration, do not disassemble, modify or repair by yourself.
- 避免保存于潮湿、高温、油烟等场所。
- Avoid storing in humid, high temperature, oily smoke and other places.
- 避免水或其他液体进入摇杆内部, 可能会影响摇杆功能。
- Avoid water or other liquids from entering the Stick, which may affect the function of the Stick.
- 儿童要在成年人的监护下使用本产品。
- Children should be under adult's supervision at all times when using this product.

产品规格/Product Specifications

产品型号 Product Model	PXN - X8MIX
连接方式 Connection Method	USB有线, 线长约2米 USB cable, the cable length is about 2 meters
工作电流 Working current	约40mA Appr. 40mA
包装尺寸 Packaging Size	约 347 * 255 * 105 mm Appr. 347 * 255 * 105 mm
产品尺寸 Product Size	约 335 * 230 * 48 mm Appr. 335 * 230 * 48 mm
产品重量 Product Weight	约 1085 g Appr. 1085 g
使用温度 Usage Temperature	10 - 40 °C
使用湿度 Usage Humidity	20 ~ 80 %

09

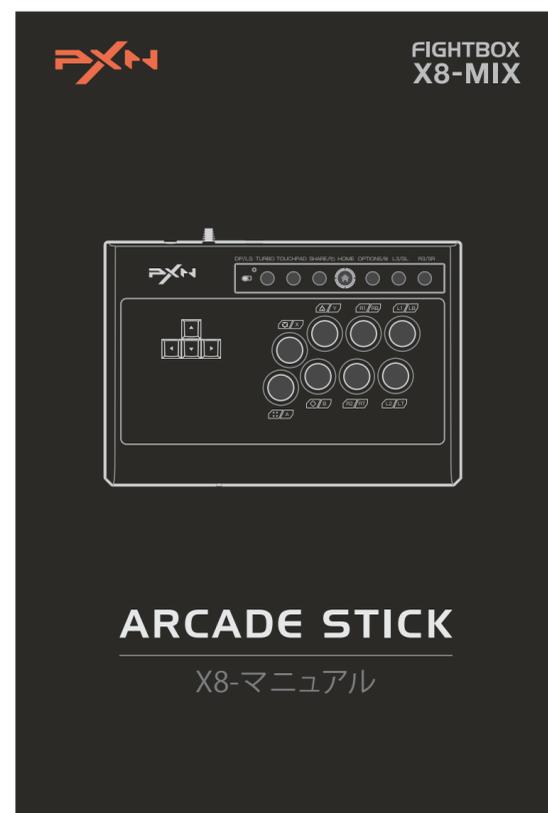

システム要件

サポートされるプラットフォーム	PC , Android , PS3 , PS4 , Xbox One/Series , Switch
PCのシステム要件	Windows 7/8/10

製品外観

10

使用方法

PC

Step 1 アーケードスティックのUSBケーブルをPCのUSBポートに差し込むと、表示ランプが点灯します。

Step 2 初めてPCに接続する場合、「新しいハードウェアが見つかりました」画面が表示され、自動的にインストールが完了します。

PCのゲームコントローラーを通して、動作テストを行うことができます。具体的な手順は以下の通りです。Windows 7またはそれ以降のOS:「コントロールパネル」→「デバイスとプリンター」→「ゲームパッド」のアイコンを右クリック → 「ゲームコントローラーの設定」を開き、「プロパティ」を選択して、テストを行います。

Androidプラットフォーム

スマホとの接続

アーケードスティックをOTGでスマホに接続すれば、操作できます。
※注:接続前にスマホでOTG機能を有効にしてください。
Type-C OTGアダプタは別途購入する必要があります)

Android TVとの接続

アーケードスティックのUSBケーブルをAndroid TVのUSBポートに差し込めば、操作できます。
※注:Android TVのカスタマイズによって、一部のAndroid TVは周辺機器の接続に対応しない場合があります)

11

PS3本体

Step 1 アーケードスティックのUSBケーブルをPS3本体のUSBポートに差し込み、PS3本体の電源を入れます。

Step 2 接続に成功すると、PS3本体が自動的にアーケードスティックにチャンネルを割り当て、対応するチャンネルのランプが点灯したままになります。

PS4本体

Step 1 PS4の純正コントローラーの電源がオフの状態、USBケーブルでアーケードスティックと接続します。

Step 2 アーケードスティックのUSBケーブルをPS4本体のUSBポートに差し込み、PS4本体の電源を入れます。

Step 3 アーケードスティックのボタンを押して、ランプが点灯したままになると、接続成功です。

XBOX ONE/SERIES 本体

Step 1 Xbox One/Seriesの純正コントローラーの電源がオフの状態、USBケーブルでアーケードスティックと接続します。

Step 2 アーケードスティックのUSBケーブルをXbox One/Series本体のUSBポートに差し込み、Xbox One/Series本体の電源を入れます。

Step 3 接続に成功すると、対応するチャンネルのランプが常時点灯になります。

XBOX ONE本体との接続イメージ図

12

SWITCH 本体

HOMEメニューの「設定」→「コントローラーとセンサー」を選択し、「Proコントローラーの有線通信」がオンになっていることを確認してください。

Switch本体との接続

Step 1 Switch本体との接続にはOTGアダプタが必要です。Type-C OTGアダプタと接続したUSBケーブルをSwitch本体のUSBポートに差し込みます。

Step 2 接続に成功すると、ランプが点灯したままになります。
※注:Type-C OTGアダプタは別途購入する必要があります)

Switchドックとの接続

Step 1 アーケードスティックのUSBケーブルをSwitchドックのUSBポートに差し込み、Switch本体の電源を入れます。

Step 2 接続に成功すると、本体が自動的にアーケードスティックにチャンネルを割り当て、対応するチャンネルのランプが点灯したままになります。

TURBO機能の設定(連射)

- TURBO機能を設定できるボタン: A, B, X, Y, LB, RB, LT, RT.
- TURBO設定: TURBOボタン + 連射させたいボタンを同時に長押しすると、LEDが点滅します。
- TURBO解除: TURBOボタン + 設定済みのボタンを同時に長押しすると、LEDが消灯します。

スティックモードの切替

- スティック切替スイッチが DP に設定されている場合、方向ボタンは方向パッドとして動作します。
- スティック切替スイッチが LS に設定されている場合、方向ボタンは左ジョイスティックとして動作します。

13

オーディオ機能

PS4、Xbox One/Series本体で双方向音声通信機能を利用して、ゲーム内でボイスチャットすることができます。

注意事項

- 激しい振動を避けてください。ご自分での分解・改造・修理はしないでください。
- 湿気が多い場所、高温の場所、油煙のある場所などでの保管は避けてください。
- ジョイスティック内部に水やその他の液体が入らないようにしてください。ジョイスティックの機能に影響を与える可能性があります。
- お子さまが本製品を使用する場合は、大人の監督の下で使用するようにしてください。
- 品質に問題が生じた場合、またはご提案がある場合、販売業者またはアフターサービス担当者までご連絡ください。

製品仕様

製品型番	PXN - X8MIX
接続方式	USBケーブル、長さ約2m
動作電流	約 40mA
パッケージサイズ	約 347 * 255 * 105 mm
製品サイズ	約 335 * 230 * 48 mm
製品重量	約 1085 g
使用温度	10 - 40 °C
使用湿度	20 ~ 80 %

14